





XL SENSOR-BATTERY CHANGE INSTRUCTIONS


1. Using a coin or screwdriver, rotate battery door until arrow is lined up with 'Open' mark.

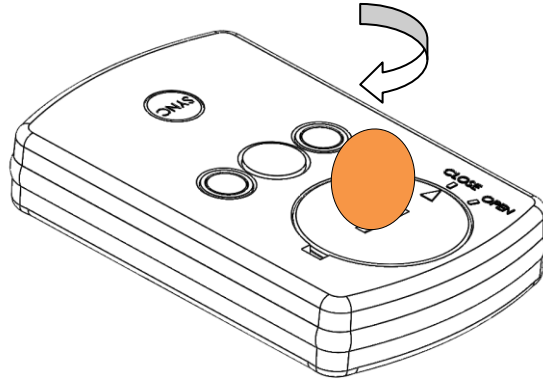

2. Use small screwdriver or similar to pry battery door up at the cutout.

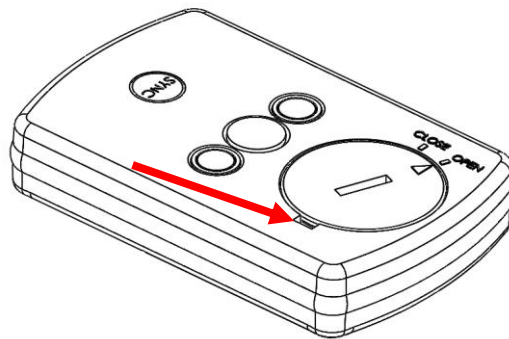

3. Once pried up slightly, the entire battery door can be lifted straight out.

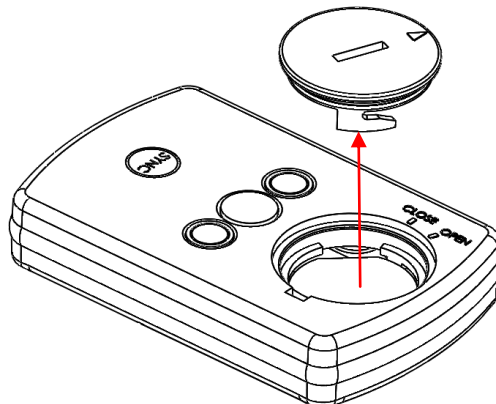



XL SENSOR-BATTERY CHANGE INSTRUCTIONS

4. Use small screwdriver to gently pry and lift this edge of battery. Only pry in this spot. Battery will pop up on that side such that it can then be lifted out.





XL SENSOR-BATTERY CHANGE INSTRUCTIONS

Battery is now popped up on this side only, and can now be easily removed.






XL SENSOR-BATTERY CHANGE INSTRUCTIONS

5. When installing new battery, start install by angling battery into holder. There are 2 small contact leads visible on one side, and the battery must be inserted so that it goes under those contacts first. Then press battery in until fully seated.

Start battery install by angling battery so that it is under these leads.

Then push down on opposite side to lock battery into place.

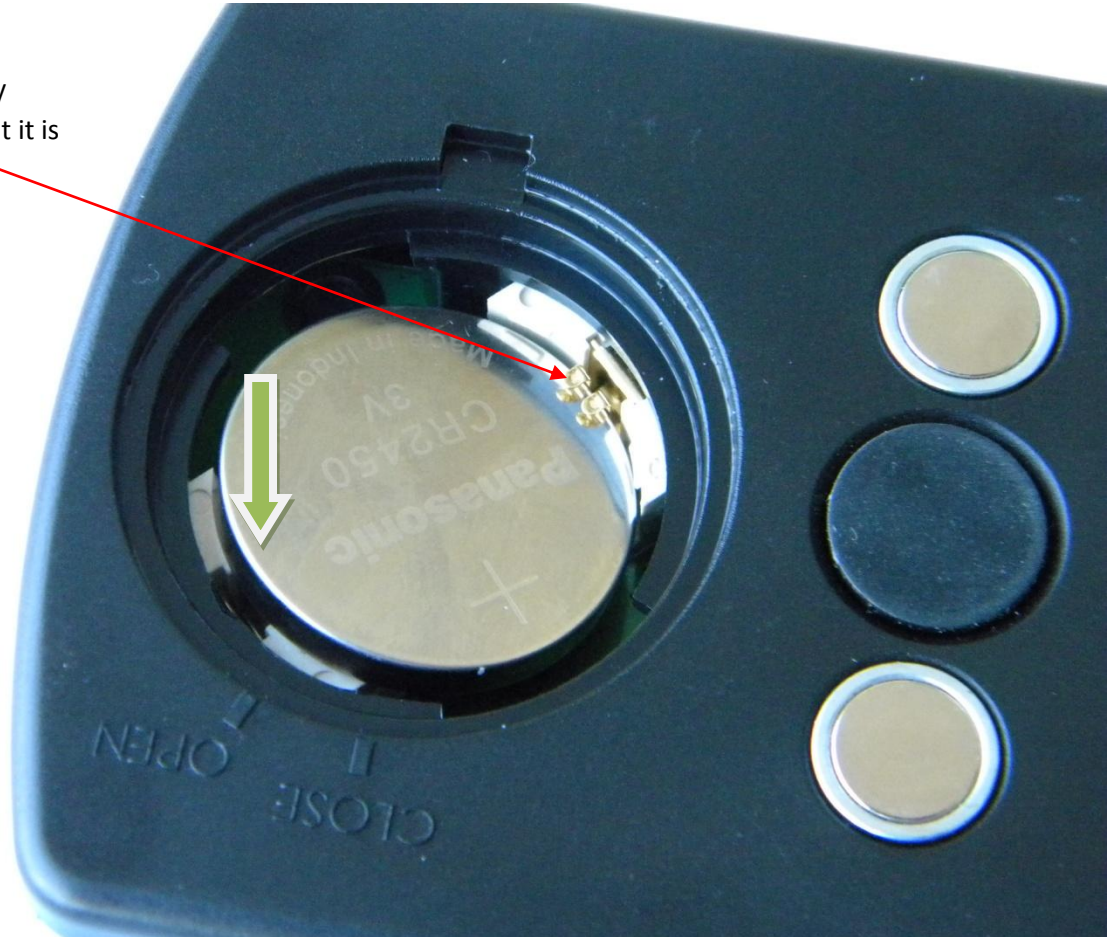



XL SENSOR-BATTERY CHANGE INSTRUCTIONS

Fully installed, battery is flat and leads are visible on this side. If leads are not visible, good contact is not being made and sensor will not function.



6. Reinstall battery door and rotate back to closed position. *Note: Battery door is sealed by an o-ring. The o-ring is lubed at the factory to ease installation. Additional lube may be added if needed. Thick lube like petroleum jelly is recommended, so that the lube does not drip into the enclosure onto electronics.*

